www.philips.com/dictation



POCKET MEMO

DPM8000
DPM8100
DPM8500
PSE8000



Table of contents

1	Important Safety instructions Rechargeable battery Memory cards Hearing protection Legal restrictions on recording Recycling About this user manual Model-specific features and diagrams	5 5 5 5 6 6 6 6
	Symbols used	6
2	Your digital dictation recorder Product highlights What's in the box Overview of the recorder Start-up screen Overview of the docking station	7 7 7 8 9 10
3	Get started Connect the docking station Install the recorder Insert and eject the memory card Charge the battery Charge using the docking station Charge using the USB cable Power on/off Initial installation process Set the language Set the date and time Power-save mode	11 11 11 11 12 12 12 12 13 13 13
4	Use your recorder Recording Record settings Create a new recording Add to or overwrite a recording	14 14 14 14

	Selecting a file Playback a recording Adjusting playback speed Quick search Delete Delete a file Delete part of a file Delete all files	16 16 16 16 17 17 17
5	Use more of your recorder Voice-activated recording Index marks Assign keywords (author ID and work type) Assign an author name Assign a work type Instructions File lock and priority Hands-free recording and transcription Hands-free recording Hands-free transcription Use Philips SpeechExec software Advanced configuration Download recordings to the computer Use the barcode scanner (DPM8500 only) Add barcode information to a file Display barcode information Overwrite barcode information	188 188 189 199 199 199 199 199 200 200 200 200 200 200 200 200 200 2
6	Settings Use the menu Menu list File menu Delete file Delete section Priority high / normal	24 24 24 25 25 25 25

Lock /EOL	25
Index set / clear	25
Author, Work type	25
Delete all	25
File information	25
Record menu	25
Profile	25
Line-in	26
Record notification beep	26
Edit mode	26
Encryption	26
Voice activation	26
Display menu	27
Brightness	27
Backlight	27
Appearance	27
Record lamp	27
Language	27
Device menu	27
Веер	27
Acoustic feedback	27
Power save	27
Date & time	27
Slide switch	27
Auto backspace	27
Device information	28
Format card	28
USB charge	28
USB audio	28
Hands-free mode	28
Diagnosis file	28
Reset settings	28
Noise reduction	28
Service	29
Display device information	29
Memory formatting	29
Updating the firmware	29
Troubleshooting	30

8 Technical data 31

1 Important

Do not make any adjustments and modifications that are not described in this manual. Follow all safety instructions to ensure proper operation of the device. The manufacturer assumes no liability for damages resulting from non-compliance with the safety instructions.

Safety instructions

- Protect the device from rain or water to prevent a short circuit.
- Do not expose the device to excessive heat caused by placing it on a heating device or in direct sunlight.
- Protect the cables from damage by being trapped, particularly at the plugs and where cables exit the housing.
- Back up your data and recordings. The manufacturer's warranty does not cover loss of data resulting from user actions.
- Do not perform any maintenance operations that are not described in this user manual. Do not disassemble the device into its component parts to carry out repairs. The device may only be repaired in authorized service centers.

Rechargeable battery

If the battery is mishandled, it can burst, cause a fire or even chemical burns. Observe the following cautions.

- Do not disassemble.
- Do not crush and do not expose the battery pack to any shock or force such as hammering, dropping or stepping on it.
- Do not short circuit and do not allow metal objects to come into contact with the battery terminals.
- Do not expose to high temperature above 60°C (140°F).
- · Do not incinerate or dispose of in fire.
- · Do not handle damaged or leaking batteries.
- Charge the battery only in the recorder.
- Keep the battery out of the reach of small children.
- Keep the battery dry.

- Only Philips rechargeable Li-ion batteries ACC8100 (and no others) can be charged in the device. Replace only with the same or equivalent type.
- Remove the battery from the device if it will not be used for an extended period of time. The device can be damaged by leaking batteries.
- Do not remove the battery from the device while it is recording. If you do this, data may be damaged or lost. Device malfunctions may also occur.
- Batteries contain substances that may pollute the environment. Used batteries and rechargeable batteries should be disposed of at an official collection point.

Memory cards

- The devices operates with SD/SDHC memory cards (DPM8000) or microSD memory cards (DPM8500) up to 32 GB in capacity.
- Philips uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.
- Formatting a memory card erases all data on the card. Before formatting the memory card, make backup copies of all important data stored on the card. The manufacturer's warranty does not cover loss of data resulting from user actions.
- Formatting the memory card on a computer may cause incompatibilities with your device. Format the memory card only on the device.

Hearing protection

Observe the following guidelines when using headphones:

- Set the volume to a moderate level and do not use headphones to listen for excessively long periods of time.
- Be particularly careful to avoid adjusting the volume to a level that your hearing cannot deal with.
- Do not turn the volume up so high that you cannot hear what is going on around you.

- In potentially dangerous situations you must be very careful, or temporarily discontinue use.
- Do not use headphones while operating a motorized vehicle, cycling, or skateboarding, etc. You could be a hazard to yourself and other road users, and possibly be breaking the law.

Legal restrictions on recording

- The use of the device's recording function is subject to the legal restrictions that may apply in your country. You should also respect the privacy and personal rights of the third parties if you record talks or lectures.
- In certain countries you may be legally required to inform the person you are conversing with on the telephone that you are recording the conversation, or that the recording of telephone conversations is illegal. Please check if the use of such data is legal in your country prior to recording telephone calls.

Recycling

When the crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.

About this user manual

You can find a quick overview of your device in the following pages. For detailed description, see the following chapters of this user manual. Read this user manual carefully.

Model-specific features and diagrams

This user manual describes a number of models of the device product range. Please note that some features are only available on certain models.

Symbols used



Tip

 This symbol identifies information that helps you to use your device more efficiently and simply.



Note

 This symbol indicates notices which you must observe when handling or operating the device.



Caution

 This symbol warns of damage to the device and possible data loss. Damage can be caused by improper handling.



Warning

 This symbol warns of danger to persons. Bodily injury or damage could be caused by improper handling.

Your digital dictation recorder

 
We are delighted that you have chosen a Philips device. Visit our website for comprehensive support such as user manuals, software downloads, warranty information and more: www.philips.com/dictaton.

 
Product highlights

- 3D Mic for best audio quality and accurate speech-recognition results
- Built-in motion sensor for automatic microphone selection
- Ergonomic slide switch for efficient single-handed operation
- Robust stainless steel casing for extra durability
- · Large color display and clear user interface for easy, intuitive operation
- Docking station for fast battery charging and hands-free recording
- · Light and motion sensors for extended battery life
- · Remote management support for time-saving deployment and maintenance
- Classic mode for clear and easy-to-use operation

What's in the box







Recorder

Docking station

USB cable







Pouch

SpeechExec product key USB memory card (DPM8000)

(PSE8000)



Battery (pre-installed)




Memory card (pre-installed)



Quick start guide

Overview of the recorder

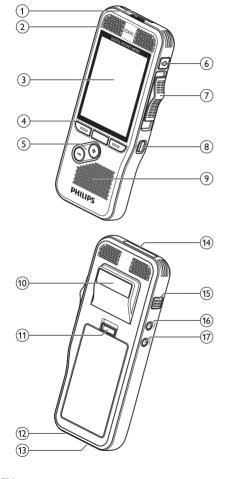


1 LED light

- Red: device is recording in overwrite or append mode
- · Green: device is recording in insert mode
- Yellow: data is being transferred to/from the computer
- (2) Microphones
- (3) Screen
- 4 Function keys F1, F2, F3
 - Select the function displayed on the screen directly above the key
- (5)+/-
 - · File navigation in stop mode
 - · Volume control during playback
 - · Menu navigation

(6) EOL/File lock, Priority

- · Mark a file as finished and protect it from being deleted
- Prioritize urgent recordings during transcription
- 7 Slide switch (● REC, STOP, ► PLAY, ≪ REW)
- (8) ON/OFF
- (9) Speaker
- (10) Barcode scanner (DPM8500)
- (11) Open the battery cover
- (12) Docking station connector
- (13) USB connector
 - Micro USB connection for the computer
- (14) Memory card slot (DPM8000)
- (15) Fast forward (FWD/▶)
- (16) MIC
 - External microphone socket (stereo jack plug, 3.5mm)
- (17) EAR
 - Headphone socket (stereo jack plug, 3.5mm)

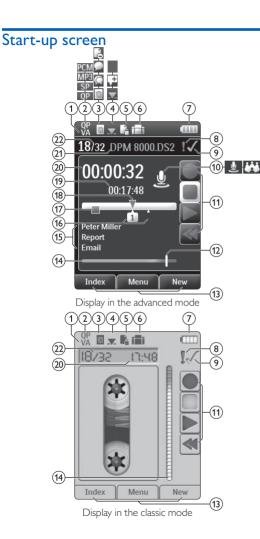



Note


• The position of the symbols may vary, depending on the model, the mode and the selected functions.

VA Voice activation is on

- When voice-activated recording is enabled, recording will start when you begin speaking. When you stop speaking, the recorder will automatically pause recording after three seconds of silence, and resume only when you begin speaking again. → Voice-activated recording, p. 18.
- (2) Recording quality: QP QP, SP SP, MP3 MP3, PCM PCM
- (3) Recording profile: Dictate, Meeting, Speech recognition. Personal
 - The recording profile presets recording parameters such as recording quality and file format, microphone sensibility and the microphone mode. \rightarrow Profile. p. 25.
- (4) Edit mode: Overwrite recording, Insert recording, Append recording (> Add to or overwrite a recording, p. 15)
- (5) File is encrypted (\rightarrow Encryption, p. 26)
- (6) A foot switch is connected to the docking station
 - The recorder can be used for hands-free recording and transcription by connecting the optional Philips foot switch to the docking station. → Hands-free recording and transcription, p. 20.
- (7) Battery charge level
 - The bars indicate the battery level. When the recorder is charged, the bars keep scrolling until charging completes.
- 8 The priority level of the recording is set to 'high' (\rightarrow File lock and priority, p. 20)
- 9 EOL/File lock
 - · The recording is marked finished and protected from being deleted. → File lock and priority, p. 20.

- (10) Microphone mode: University Directional mode, 360 degree mode
 - The microphone mode is preset by the selected recording profile to suit the recording conditions. → Profile, p. 25.
 - The microphone mode can be controlled by the integrated motion sensor. The motion sensor senses when the device is placed on the desk or held in the hand and sets the microphone mode accordingly.
- (11) Slide switch indicator
- (12) Sensitivity level indicator for voice-activated recording (→ Voice-activated recording, p. 18)
- (13) Current function of the function key F1, F2, F3
- (14) Level meter indicator
- (15) Keyword area
 - One or more keywords, such as the author's name, can be assigned to every recording. Keywords can be used to identify recordings and automatic file routing. → Assign keywords (author ID and work type), p. 19.
- (16) Index mark indicator (→ Index marks, p. 18)
- (17) Instruction indicator (→ Instructions, p. 19)
- (18) Position indicator of current playback/recording
- (19) File length
- (20) Current recording/playback time
- (21) File name
- (22) Current file number/Total number of files

Overview of the docking station

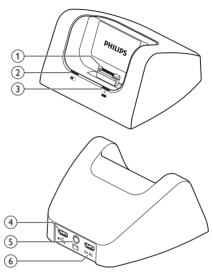

- (1) Docking station connector
- (2) Charge indicator light
- (3) Download indicator light
- (4) USB connector
 - Micro USB connection for the computer
- (5) Foot switch connector
 - Connect the Philips foot control LFH2210 (optional) for hands-free dictation and transcription. → Hands-free recording and transcription, p. 20.
- (6) Power supply connector
 - Connect an optional power supply

Get started



Caution

• Ensure you have read the safety instructions before you connect and install your recorder. → Safety instructions, p.

Connect the docking station

- Plug the USB connector into a USB port on your computer.
- 2 Insert the micro USB plug into the USB port on the rear side of the docking station.

 
Install the recorder



Note

• Charge the battery for 3 hours before first use.

The battery is pre-installed in the recorder. Pull the battery tape off from the battery door before charging.



Insert and eject the memory card

The devices operates with a SD/SDHC memory card (DPM8000) or a microSD memory card (DPM8500) and supports cards with storage capacities of up to 32 GB. Your recorder is packaged with a memory card already inserted and formatted

To insert and eject a memory card:

- 1 Locate the memory card slot on the top of the recorder (DPM8000) or remove the battery cover and the battery (DPM8500).
- 2 Insert a memory card with the gold-colored contacts facing down (toward front of the device).
- **3** Push the memory card in the memory card slot until it locks in place.
- 4 To remove the card press the memory card slightly until the snapping mechanism unlocks and the card is ejected.





Note

- Do not remove the memory card while recording is in progress. Data may be damaged or lost.
- Philips uses approved industry standards for memory cards, but some brands may not be fully compatible with your device. Using an incompatible memory card may damage your device or the memory card and can corrupt data stored on the card.
- When a new, unformatted memory card or a memory card that was formatted by another device is inserted, the recorder will display a prompt to format the memory card.
- · Formatting a memory card erases all data on the card. Before formatting the memory card, make backup copies of all important data stored on the card. The manufacturer's warranty does not cover loss of data resulting from user actions
- Formatting the memory card on a computer may cause incompatibilities with your device. Format the memory card only on the device.
- · Recording and formatting is not possible if the memory card is in read-only mode (locked).

Charge the battery

Charge using the docking station

Place the recorder in the docking station. → The recorder starts charging.



Note

- Charge the battery for 3 hours before first use.
- The computer must be turned on when charging the battery.
- The device may become warm when the battery is being charged.
- The maximum battery capacity will only be reached after several charging/discharging cycles.
- 2 Your recorder is now ready to use.

Charge using the USB cable

- 1 Plug the USB connector into a USB port on your computer.
- 2 Insert the micro USB plug into the USB port on the recorder.

Power on/off

The recorder is turned on and off by sliding the **ON/OFF** switch. When using it for the first time, you will be prompted to set the language, date and time.



Note

• The recorder switches itself off automatically if no key is pressed within a pre-set period of time (→ Power-save mode, p. 13).

Initial installation process

The initial installation process starts when first using the device or possibly if there has been a long interruption to the power supply. The date and time entered are saved with each recording as the recording time.

Set the language

When using the recorder for the first time, you will be prompted to set the language.

- 1 Press +/- to select your language.
- 2 Press F2 (OK) to confirm.

Set the date and time

After selecting the language, the recorder will prompt you to set the current date and time.

- 1 Press +/- -to change the value for the year, month or day.
- 2 Press F3 (Next) to advance to the next entry.
- 3 After setting the day, press F3 (Next) to advance the settings to the correct time.
- 4 Press +/- to select a 12-hour or 24-hour clock, and to change the value of the hour and minute settings and AM or PM (if a 12-hour clock is selected).
- 5 Press F2 (OK) to confirm the date and time.→ The recorder is now ready to function.



Tip

 You can change the language, date and time at any time using the settings menu (→ Settings, p. 24).

Power-save mode

By default, the recorder will enter power-save mode after 5 minutes of inactivity. Lift up the recorder or press any button to reactivate it.



Tip

 You can change the length of time before the recorder will enter into power-save mode. → Power save, p. 27.

Use your recorder



Note

- You can customize the settings and behavior of your device (→ Settings, p. 24.)
- The descriptions in this chapter are based on the default settings.

Recording

Record settings

Set the required recording profile before you start a recording session. The recording profile presets recording parameters such as recording quality and file format, microphone sensitivity and the microphone mode to suit the recording conditions. → Profile, p. 25.

When voice-activated recording is enabled, recording will start when you begin speaking. When you stop speaking, the recorder will automatically pause recording after three seconds of silence, and resume only when you begin speaking again. → Voice-activated recording, p. 18.

The recorder can be used for hands-free recording by connecting the optional Philips foot switch to the docking station. → Hands-free recording, p. 20.



Caution

· Do not remove the battery from the device while it is recording. Data may be damaged or lost or malfunctions may occur.

Create a new recording

- 1 Press **F3** (New) to create a new recording.
- 2 To start recording, point the microphone toward the sound source and move the slide switch to the **OREC** position.
 - → The LED lights in red in overwrite or append mode or green in insert mode while recording.
- 3 To stop recording, move the slide switch to the **STOP** position.



Note

- Press **F1 (Index)** during recording or playback to insert an index mark (→ Index marks, p. 18).
- Press and hold **F3 (Instr)** during recording to record an instruction (→ Instructions, p. 19).
- If the recording time exceeds the available capacity. recording stops and a message is displayed. You can not make any more recordings. Delete the recordings which you no longer require, replace the memory card, or connect the device to a computer and transfer the files to your computer.



Tip

· For best recording results, speak clearly and keep the microphone about 5 to 15 centimeters (2 to 6 inches) away from your mouth.

Add to or overwrite a recording

You can edit an existing recording by overwriting a part of it or inserting additional recording.

- 1 While the recorder is in stop mode, press **F2 (Menu)** and select Record > Edit mode
- 2 Set the required editing mode (→ Edit mode, p. 26).
 - Append mode: add additional recording after existing recording in a file.
 - → The symbol is displayed in the information bar at the top of the screen when in append mode and the LED lights in red while recording.
 - Insert mode: insert additional recording without overwriting existing recording in a file.
 - → The symbol is displayed in the information bar at the top of the screen when in insert mode and the LED lights in green while recording.
 - Overwrite mode: overwrite a previous recording starting from any point within the file.
 - → No symbol is displayed in the information bar at the top of the screen when in overwrite mode and the LED lights in red while recording.
- 3 Press +/- to select the file into which the insertion should he made.
- 4 When using the insert or overwrite mode, play, forward or rewind to the position where the insertion should be made.
- 5 To start recording, point the microphone toward the sound source and move the slide switch to the **REC** position.
 - → The LED lights in red in overwrite or append mode or green in insert mode while recording.
- 6 To stop recording, move the slide switch to the STOP position.



Note

- · When you edit, the recording quality of the original recording is used.
- The Insert recording mode is not available when the recording format is MP3 or PCM.

Playback

Selecting a file

- 1 Press + while the device is in stop mode.
 - → The position indicator jumps to the end of a file.
 - → The position indicator jumps to the start of the next file.
- 2 Press while the device is in stop mode.
 - → The position indicator jumps to the start of a file.
 - → The position indicator jumps to the end of the previous file.



Note

- If the file contains index marks or recorded instructions. press +/- to jump to the previous or the next index mark or instruction.
 - → The index number is displayed for one second.

Playback a recording

- 1 While the device is in stop mode, press +/- to select the file to play and locate the beginning of the recording.
- 2 Move the slide switch to the ▶ PLAY position to start playback.
- 3 Press +/- to adjust the volume.
- 4 Move the slide switch to the **STOP** position to stop playback. → Playback is paused at the current position. The device returns to stop mode.



Tip

• Turn on the noise reduction function for better playback quality. Noise reduction reduces the background noise and improves the intelligibility of quieter voices. (→ Noise reduction, p. 28).

Adjusting playback speed

- 1 Press **F3 (Speed)** repeatedly during playback to toggle between faster, slower and normal playback speed.
 - → Playback speed becomes faster (+30 %) and the > icon will be displayed.
 - → Playback speed becomes slower (-25 %) and the icon will be displayed.
 - → Playback returns to normal speed and the ▶ icon will be displayed.

Ouick search

You can scan backward or forward in the current file at a fast speed. This allows to find a specific part of the recording.

- 1 Move the slide switch to the **≪ REW** position during playback or when the device is stopped
 - → to scan backward in the current file at a fast speed.
- 2 Press and hold **FWD** during playback or when the device is stopped
 - → to scan forward in the current file at a fast speed.



Note

• If the file contains index marks or recorded instructions. scanning backward or forward stops for 1 second at the index mark or instruction.



Tip

• Playback sound during quick search can be activated or deactivated. This allows you to listen to the recording while forwarding or rewinding. (> Acoustic feedback, p. 27).

Delete

You can delete individual files from the device, part of a file or delete all files simultaneously.



Note

- Deleted files can not be recovered.
- Files that are marked finished and locked (EOL) cannot be deleted. Unlock it by pressing the EOL button.
- Make sure that the memory card is not set to read-only (locked).

Delete a file

- 1 While the recorder is in stop mode, press +/- to select the file to be deleted
- 2 Press F2 (Menu) and select File > Delete file.
- 3 Press **F2 (OK)** to confirm the deletion.
 - → The file is deleted. Sequential file numbers are reassigned automatically.

Delete part of a file

- 1 While the recorder is in stop mode, press F2 (Menu) and select File > Delete section.
- 2 Using the play, forward or rewind functions, navigate to the beginning of the section to be deleted.
- 3 While the recorder is in stop mode, press F3 (Mark).
- **4** Using the play, forward or rewind functions, navigate to the end of the section to be deleted.
 - → The section to be deleted is marked in red.
- 5 While the recorder is in stop mode, press F2 (Delete) to confirm the deletion of the marked section.

Delete all files

- 1 While the recorder is in stop mode, press F2 (Menu) and select File > Delete all.
- 2 Press F2 (OK) to confirm the deletion.
 → All files are deleted.

Use more of your recorder

Voice-activated recording

When voice-activated recording is enabled, recording will start when you begin speaking. When you stop speaking, the device will automatically pause recording after three seconds of silence, and resume only when you begin speaking again. Use the voiceactivation threshold to set the volume at which the device should begin recording

- 1 Activate the voice-activated recording feature in the settings menu (→ Settings, p. 24).
 - → When activated, the VA symbol is displayed in the information bar at the top of the screen.
- 2 To start recording, point the microphone toward the sound source and move the slide switch to the **OREC** position.
 - → The devices switches to standby mode. Recording will start when you begin speaking (or the sound level is above the voice-activation threshold).
 - → When you stop speaking (or the sound level drops below the voice-activation threshold), the device will automatically pause recording after three seconds and the LED flashes
- 3 Press +/- during recording to adjust the voice-activation threshold
- 4 To stop recording, move the slide switch to the **STOP** position.

Index marks

Index marks can be used to mark certain points in a recording as points of reference.

- To add an index mark, press **F1 (Index)** during recording or playback.
 - → The index number is displayed for one second.
 - → Up to 32 index marks can be set per file.
- 2 To locate an index mark, press +/- while the recorder is in stop mode (→ Selecting a file, p. 16).
- 3 To delete an index mark, play, fast forward or fast rewind to the index mark to be deleted. While the recorder is in stop mode, press F2 (Menu) and select File > Index clear.

Assign keywords (author ID and work type)

One or more keywords, such as the author's name or a work type, can be assigned to every recording. Keywords can be used to identify recordings and automatic file routing in Philips SpeechExec software.



Note

- Keywords must first be set up with Philips SpeechExec software. → Advanced configuration, p. 22.
- By default, the keyword category **Author** with the keywords 'DPM8000/DPM8500' and '- - -' (empty) and the category Work type with the keywords 'Memo', 'Letter', 'Fax' and 'Report' are available.

Assign an author name

- 1 While the recorder is in stop mode, press **F2 (Menu)** and select File > Author.
 - → a list of author names is displayed.
- 2 Press +/- to select an author name.
- 3 Press F2 (OK) to assign the selected author name to the recording.

Assign a work type

- 1 While the recorder is in stop mode, press **F1 (Work type)** → a list of work types is displayed.
- 2 Press +/- to select a work type.
- 3 Press F2 (OK) to assign the selected work type to the recording.

Instructions

Spoken instructions are recorded comments by the author that are directed to the person transcribing the recording. They usually contain information which is relevant to the recording but does not have to be typed out.

- 1 To record an instruction, press and hold **F3 (Instr)** during recording.
 - → The instruction is displayed as a blue line on the file position bar.
- 2 To locate an instructions, press +/- while the recorder is in stop mode (→ Selecting a file, p. 16).
- **3** To delete an instruction, follow the steps for deleting a part of a recording (> Delete part of a file, p. 17).



Note

 Instructions can only be recorded when the recording format is DSS/DSS Pro-

File lock and priority

Use the file lock function to prevent important files from being accidentally deleted and mark them as finished. With the priority-setting option, urgent recordings can be prioritized during transcription.

- 1 While the recorder is in stop mode, press the **EOL** button to lock the file and mark it as finished.
 - → The ✓ symbol is displayed.
 - → A new, empty recording is created.
- 2 To assign priority status to the recording, press the **EOL** button again within half a second.
 - → The symbol is displayed.
- To make changes to the file, unlock it by pressing the **EOL** button.



Note

- Philips SpeechExec software can be configured to download only those files from the device to the computer that are marked finished.
- · Locked files are deleted when the memory card is formatted or the delete-all-files function is used

Hands-free recording and transcription

 
The recorder can be used for hands-free recording and transcription by connecting the optional Philips foot pedal LFH2210 to the docking station. In this operating mode, you can control the recording and playback functions with the foot pedal.



Tip

- Use the auto-backspace feature to jump back the configured number of seconds in the recording when restarting playback.
- To activate the auto-backspace feature, press **F2 (Menu)** on the recorder while the recorder is in stop mode and select **Device** > **Auto backspace**.

Hands-free recording




- 1 Make sure that the docking station is NOT connected to a computer via USB.
- 2 To activate the hands-free recording feature, press F2 (Menu) on the recorder while the recorder is in stop mode and select Device > Hands-free mode > Dictate
- 3 Connect the foot pedal to the food pedal port figure on the rear side of the docking station and place the recorder in the docking station.
 - → The symbol is displayed in the information bar at the top of the screen.
- 4 Press the middle pedal of the foot pedal to enter recordstandby mode. To start recording, press the right pedal

of the foot pedal. The behavior for starting and stopping recording depends on the setting of the switch on the underside of the foot control:

- N (Neutral) position: Press and hold the right pedal for recording. For short pauses, release the right pedal.
- T (Toggle) position: Press and release the right pedal to start recording. For short pauses, press the right pedal of the foot pedal again. To continue recording, press the right pedal of the foot pedal again.
- 5 To stop recording, press the left pedal of the foot pedal. To continue recording, repeat step 4.
- 6 Press and hold the left pedal of the foot pedal for fast rewind. When rewinding reaches the desired position, release the pedal.
- 7 When recording is stopped, press the right pedal of the foot pedal to start playback. The behavior for starting and stopping playback depends on the setting of the switch on the underside of the foot control:
 - N (Neutral) position: Press and hold the right pedal for playback. When the pedal is released, playback is stopped.
 - T (Toggle) position: Press and release the right pedal to start continuous playback. Press the right pedal again to stop playback.
- 8 Double click the left pedal of the foot pedal during recording to finish/lock (EOL) the current recording and create a new file.

 Hands-free transcription



1 Make sure that the docking station is NOT connected to a

- computer via USB.
- 2 To activate the hands-free transcription feature, press F2 (Menu) on the recorder while the recorder is in stop mode and select **Device** > **Hands-free mode** > Transcribe
- 3 Connect the optional Philips foot pedal to the food pedal port on the rear side of the docking station and place the recorder in the docking station.
 - → The symbol is displayed in the information bar at the top of the screen.
- 4 Press and hold the left pedal for fast rewind. When rewinding reaches the desired position, release the pedal.
- 5 Press and hold the middle pedal to fast forward. When forwarding reaches the desired position, release the pedal.
- 6 Press the right pedal to start playback. The behavior for starting and stopping playback depends on the setting of the switch on the underside of the foot control:
 - N (Neutral) position: Press and hold the right pedal for playback. When the pedal is released, playback is stopped.
 - T (Toggle) position: Press and release the right pedal to start continuous playback. Press the right pedal again to stop playback.



Note

- If the docking station is connected to a computer, you can switch between USB mode and hands-free mode. In USB mode the recorder is displayed as an external drive on the connected computer.
- The function is only available when the switch on the underside of the foot pedal is in the N position and the recorder is in the stop mode and at the end of the current recording.
- To switch between USB mode and hands-free mode, double click the right pedal of the foot pedal and then hold the pedal for about 1 second.

Use Philips SpeechExec software

Philips SpeechExec software (Windows version only) can be used for advanced configuration of the recorder, automatic download, conversion and routing of files.



Note

• For detailed information about SpeechExec software, refer to the SpeechExec help.

Advanced configuration

Philips SpeechExec software provides a wizard that guides users through the configurations and settings of the device. The wizard assists in configuring time format, sound feedback, voice-activated recording, display appearance, recording profiles, keywords, and file download to the computer.

- 1 Connect the recorder to the computer using the USB cable or the docking station.
- 2 Start Philips SpeechExec Pro software and click **Settings** > General settings on the menu bar and select DPM Configuration > DPM Wizard from the list on the left panel.
- 3 Click the **Start Wizard...** button to open the wizard and follow the on-screen instructions to customize the recorder.
- 4 Click the **Finish** button to close the wizard and confirm the transfer of the new settings to the recorder.



Note

• When the recorder is connected to the computer for the first time. Windows detects the new hardware and automatically installs the required drivers. When the installation is complete, Windows may prompt you to restart the computer.

Download recordings to the computer

With USB mass storage support, the recorder is automatically displayed as an external drive when it is connected to the computer. It can then be accessed easily with any program as a regular drive.

Use Philips SpeechExec software for automatic download, conversion, and routing of files.

- Make a recording with the recorder.
- 2 Start Philips SpeechExec Pro software.
- **3** Connect the recorder to the computer using the USB cable or the docking station.
- 4 By default, the recordings on the recorder will be downloaded automatically to the computer and moved to the Finished dictations folder of the work list.



Note

 How and which files are downloaded after the recorder. is connected to a computer can be configured in the settings menu of Philips SpeechExec software or with the configuration wizard.

Use the barcode scanner (DPM8500 only)

The barcode module allows barcode scanning from a distance of up to 25 cm (10 inches) and supports barcode information with up to 30 digits.

Add barcode information to a file

- 1 While the recorder is in stop mode, press F1 (Scan) and scan the barcode.
 - → When a barcode is recognized, the device will beep and the barcode information is displayed.
- 2 Press F2 (OK) to confirm the barcode input.
 - → The device returns to the stop mode.

Display barcode information

To display previously recorded barcode information:

1 While the recorder is in stop mode, press F2 (Menu) and select File > File information.

Overwrite barcode information

- 1 While the recorder is in stop mode, press F1 (Scan) and scan the barcode.
 - → When a barcode is recognized, the device will beep and the old and the new barcode information is displayed.
- 2 Press **F2 (OK)** to confirm the new barcode information and to overwrite the old barcode information.
 - → The device returns to the stop mode.

6 Settings

Use the menu

- 1 Press **F2 (Menu)** while the recorder is in stop mode to open the menu.
- 2 Press +/- to select the next/previous menu item.
- 3 Press F3 (Enter) to enter a sub menu. Press F1 (Back) to exit the menu.
- 4 Press +/- to select a function.
- 5 Press F2 (OK) to confirm a selection or F1 (Back) to exit a sub menu without changing a setting.



Note

 Some settings, such as defining keywords, file encryption or device lock, are available only through Philips SpeechExec software. → Advanced configuration, p. 22.

Menu list

File

Delete file

Delete section

Priority high / normal

Lock / EOL

Index set / clear

Author

Work type Delete all

File information

Record

Profile

Line-in

Record notification beep
Edit mode
(Encryption)
Voice activation

Display

Brightness Backlight

Appearance

Record lamp

Language

Device

Веер

Acoustic feedback

Power save

Date & time

Slide switch

Auto backspace

Device information

Format card USB charge

USB audio

Hands-free mode

Diagnosis file

Reset settings

Noise reduction

File menu

Delete file

Delete individual files from the device. → Delete a file, p. 17.

Delete section

Delete part of a file. → Delete part of a file, p. 17.

Priority high / normal

With the priority-setting option, urgent recordings can be prioritized during transcription. You can select **High** (the symbol is displayed) or **Normal**. The default value is **Normal**. → File lock and priority, p. 20.

Lock /FOL

Use the file lock function to prevent important files from being accidentally deleted and mark them as finished. → File lock and priority, p. 20.

Index set / clear

Index marks can be used to mark certain points in a recording as points of reference. → Index marks, p. 18.

Author, Work type

One or more keywords, such as the author's name or a work type, can be assigned to every recording. Keywords can be used to identify recordings and automatic file routing in Philips SpeechExec software. → Assign keywords (author ID and work type), p. 19.

Delete all

Delete all files simultaneously from the device.

Delete all files, p. 17.

File information

Display information about the current file, such as file number, file name, assigned keywords, barcode information, recording date and time

Record menu

Profile

The recording profile presets recording parameters such as recording quality and file format, microphone sensibility and the microphone mode to suit the recording conditions. The profile's symbol is displayed in the information bar at the top of the

- Personal: customize all settings.
 - » Recording quality: set the file format and the quality of the recording (bit rate). The higher the recording quality the bigger the file and the less recordings you can create.
 - > DSS SP: dss mono 13.7 kbit/s > **DSS OP**: .ds2, mono, 28 kbit/s
 - > MP3 Stereo: .mp3, stereo, 192 kbit/s
 - > PCM Voice: .wav. mono. 353 kbit/s
 - > PCM Stereo: way stereo 705 kbit/s
 - » Microphone sensitivity: adjust the recording sensitivity to avoid recording background noises and to adapt to the recording environment.
 - > **Meeting**: high sensitivity
 - > Dictate: medium sensitivity
 - > **Private**: low sensitivity
 - » Microphone mode: the microphone mode can be controlled by the integrated motion sensor. The motion sensor senses when the device is placed on the desk or held in the hand and sets the microphone mode accordingly.
 - > **Directional**: focus on the right microphone and filter sounds from the side.
 - > **360 degrees**: records sounds in all directions.
- Meeting: optimized for the recording of multiple sound sources, such as meetings and conferences with a small num-

- ber of people (Recording quality: MP3 Stereo, Microphone sensitivity: Meeting (high), Microphone mode in hand: 360 degrees, Microphone mode on desk: 360 degrees).
- Dictate: optimized setting for the recording of a sound source close to the device (Recording quality: DSS QP, Microphone sensitivity: Dictate (medium), Microphone mode in hand: 360 degrees, Microphone mode on desk: 360 degrees).
- Speech recognition: optimized for subsequent editing using speech recognition software (Recording quality: DSS OP, Microphone sensitivity: Private (low), Microphone mode in hand: Directional, Microphone mode on desk: 360 degrees).



Note

 All recording profiles can be customized with Philips SpeechExec software. → Advanced configuration, p. 22.

Line-in

If you connect an external microphone to the device, the recording source will switch automatically and the device's microphones will be turned off. Set the line-in option depending on the external source:

- Off: connect an external mono or stereo microphone
- On: connect an amplified recording source (e.g. a stereo system)

Record notification beep

Enable/disable a beep tone indicating recording is about to begin.

Edit mode

You can edit an existing recording by overwriting a part of it or inserting additional recording. > Add to or overwrite a recording, p. 15.

Encryption

Recordings can be encrypted in real time using the Advanced Encryption Standard (AES or Rijndael Algorithm) with a key length of 256 bits. AES provides a very high degree of security and has been approved in the USA for the most highly classified government information.



Note

- Encryption must be set up with Philips SpeechExec software. → Advanced configuration, p. 22.
- Encryption is only supported for files in DSS Pro format.
- When encryptionis activated, the symbol is displayed in the information bar at the top of the screen.
- Encrovted files can only be played with Philips SpeechExec software.

The device itself can be assigned a PIN code to protect against unauthorized use or file playback.

Voice activation

When voice-activated recording is enabled, recording will start when you begin speaking. When you stop speaking, the device will automatically pause recording after three seconds of silence. and resume only when you begin speaking again. → Voice-activated recording, p. 18.

Display menu

Brightness

Adjust the brightness of the display. The brightness level of the display will affect how quickly the device consumes battery power.

Backlight

Set the length of time the device waits before turning off the display's backlight:

- Auto: adjusts the brightness of the display automatically and turns off the display's backlight after 8 seconds.
- 8 sec (default)
- 20 sec
- On

Appearance

Select a display mode: **Advanced** (default), **Classic**. → Start-up screen, p. 9.

Record lamp

Enable/disable the LED light.

Language

Set the language for the device's user interface: **English**, **Deutsch**, **Français**, **Español**, **Italiano**. → Set the language, p. 13

Device menu

Веер

Enable/disable key and signal tones.

Acoustic feedback

Allows you to listen to the recording while forwarding or rewinding. → Quick search, p. 16.

Power save

Set the length of time before the recorder will enter into power-save mode: 1 min, 5 min (default), 10 min, 15 min, Off.

→ Power-save mode, p. 13.

Date & time

The date and time entered are saved with each recording as the recording time. \rightarrow Set the date and time, p. 13

Slide switch

You can customize the functionality of the slide switch. By default, the slide switch is set to **International**.

Position	Interna- tional	Philips	Philips classic*	German
1	•	▶	≫	≫
2		▶/●	▶/●	■ / 0
3	•	■/①	■ / 0	▶/●
4	≪	≪	≪	≪

^{*} EOL and REC STANDBY buttons switch functionality.

Auto backspace

Move the slide switch briefly to the **≪ REW** position to jump back the configured number of seconds in the recording: **Off** (default), **1 sec, 2 sec, 3 sec, 4 sec**.

Device information

Display information about the device, such serial number, model number and firmware version.

Display device information, p. 29.

Format card

Deletes all recordings and files saved on the device. \rightarrow Memory formatting, p. 29.

USB charge

Change the charging behavior of the device. If the USB port of your computer does not supply enough power capacity (500 mA), charging may not be successful. Set the USB charge option to **Slow [100 mA]** or **Off** and use an (optional) power supply.

- Fast [500 mA] (default)
- Slow [100 mA]
- · Off

USB audio

When set to **On**, the device can be used as audio output device for the computer when it is connected via the USB cable.

Hands-free mode

The recorder can be used for hands-free recording and transcription by connecting the optional Philips foot switch LFH2210 to the docking station. In this operating mode, you can control the recording and playback functions with the foot switch.

→ Hands-free recording and transcription, p. 20.

Diagnosis file

Save a diagnosis file for error analysis and a file with all device configuration settings on the memory card.

Reset settings

Reset your settings to the factory default values.

Noise reduction

Turn on the noise reduction function for better playback quality. Noise reduction reduces the background noise and improves the intelligibility of quieter voices.

Service

Do not perform any maintenance operations that are not described in this user manual. Do not disassemble the device into its component parts to carry out repairs. The device may only be repaired in authorised service centers.

Display device information

- 1 In stop mode (start-up screen), press **F2 (Menu)** and select Device > Device information.
 - → General device information is displayed: serial number, model number firmware version of the device.
- 2 Press **F1** (**Back**) to return to the stop mode.

Memory formatting



Caution

- · Formatting the memory deletes all recordings and files saved on the device.
- 1 In stop mode (start-up screen), press **F2 (Menu)** and select Device > Format card
- 2 Press F3 (Enter), then press F2 (OK) to confirm the formatting.



Tip

• Press **F1 (Back)** to cancel the operation.

Updating the firmware

Your device is controlled by an internal program called firmware. As a part of ongoing product maintenance, the firmware is upgraded and errors are corrected.

It is possible that a newer version (an "update") of the firmware has been released since you purchased the device. In this case you can easily update your device to the latest version.



Caution

- The battery should be fully charged to prevent the power supply being interrupted during the update.
- 1 Connect the device to the computer using the USB cable or the docking station.
- 2 Download the firmware update for your model from the website www.philips.com/dictation onto your computer.
- 3 Copy the new firmware file to the root directory of the device
- 4 Disconnect the device from the computer.
 - → The firmware is automatically updated. This may take a few minutes.



Caution

· Wait until the firmware update is complete before calling up other device functions. Failure to properly update the firmware may result in the device malfunctioning.



Tip

• Firmware updates can be performed automatically via Philips SpeechExec software. → Use Philips SpeechExec software, p. 22.

Troubleshooting

Problem	Possible cause/solution
The device does not turn on	 Battery is empty. → Recharge the battery. The device is turned off. → Turn the power on. → Power on/off, p. 12. The device is in power-save mode. → Lift up the recorder or press any button to reactivate it.
The device does not playback recordings	No recordings are saved in the device.
The device does not respond	 Turn the power off and on again. → Power on/off, p. 12.
I cannot hear anything from the speaker	 Headphones are connected to the device.
Recording does not start	 There is no memory card in the device. → Insert a memory card into the device. → Insert and eject the memory card, p. 11 Memory card is not formatted correctly. → Format the memory card in the device. → Memory formatting, p. 29 The the available memory space for recording is full. → Delete some files or move them to an external device. The file is locked. → Unlock the file. → File lock and priority, p. 20 The memory card is locked. → Unlock the memory card.
I cannot hear anything from the headphones	 The headphones are incorrectly connected.

8 Technical data

Connectivity

- Headphones: 3.5 mm
- Microphone: 3.5 mm
- USB: high-speed USB 2.0
- Docking connector
- Memory card slot

Display

- Type: color TFT
- Diagonal screen size: 2.4 inches / 6.1 cm
- Resolution: 320 x 240 pixels

Storage media

- Exchangeable memory card
- Memory card types: SD/SDHC (DPM8000, DPM8200), micro SD/SDHC (DPM8500), up to 32 GB
- · Mass storage class compliant

Audio recording

- Recording format: DSS/DSS Pro (Digital Speech Standard), MP3, PCM
- Built-in microphone: 1 directional microphone, 1 microphone for 360 degree recording
- Recording modes: DSS QP (.ds2/mono), DSS SP (.dss/mono), MP3 (.mp3/stereo), PCM Voice (.wav/mono), PCM Stereo (.wav/stereo)
- Bit rate: 13.7 kbit/s (DSS SP), 28 kbit/s (DSS QP), 192 kbit/s (MP3), 353 kbit/s (PCM Voice), 705 kbit/s (PCM Stereo)
- Recording time (4 GB memory card): 700 hours (SP), 350 hours (QP), 50 hours (MP3), 27 hours (PCM Voice), 13 hours (PCM Stereo)
- Sample rate: 44.1 kHz (MP3), 22.05 kHz (PCM), 16 kHz (DSS QP), 12 kHz (DSS SP)

Sound

- Speaker type: built-in round dynamic speaker
- Speaker diameter: 28 mm
- Speaker output power: 200 mW

Power

- Battery type: Philips rechargeable Li-ion battery ACC8100
- Battery lifetime: up to 30 hours of recording (QP mode), up to 200 hours standby
- Charging time (full charge): 3 hours

Security

- · Real time file encryption
- Encryption standard: Advanced Encryption Standard (AES or Riindael Algorithm) with 256 bits
- · Device lock with pin code

Barcode scanner (DPM8500)

- Compatible bar codes: UPC-A, UPC-E, EAN-8, EAN-13, Code 128, GS1-128, ISBT 128, Code 39, Interleaved 2 of 5, Inverse 1D. GS1 DataBar, Matrix 2 of 5
- · Scan engine: CCD-based, single line

Green Specifications

- Compliant to 2011/65/EU (RoHS)
- · Lead-free soldered product

Operation conditions

- Temperature: -5° 45°C / 23° 113°F
- Humidity: 10 % 90 %, non-condensing

Specifications

- Product dimensions (W × D × H): $53 \times 123 \times 15 \,\text{mm} / 2.1 \times 4.8 \times 0.6 \,\text{inches}$
- Weight: 117 g / 4.1 oz including battery



Specifications are subject to change without notice.

© 2017 Speech Processing Solutions GmbH. All rights reserved.

All trademarks are the property of their respective owners.

Document version 1.6, 2017/10/25. Document number 5103 109 9758.7