

Loading The Tool

Read instructions
BEFORE operating the tool!



FUEL



Check Best before date



Open door tray



Lift fuel injection



Insert Fuel cell cap upwards





Lower fuel injection



Close door tray


NAILS

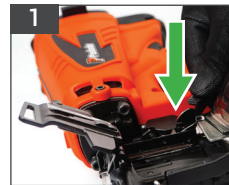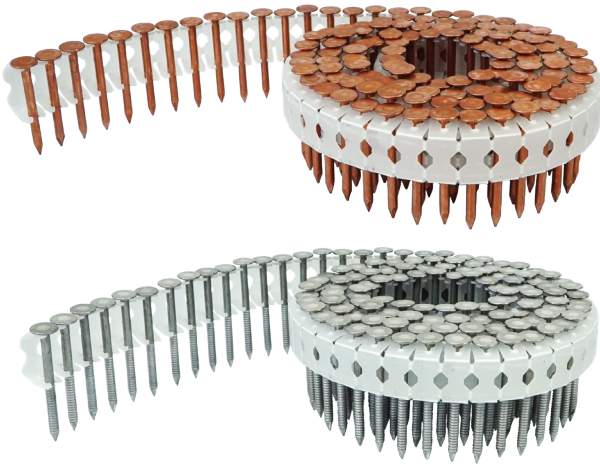


Open magazine




Remove ALL tape from coil

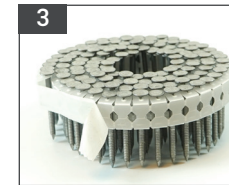


Place nails in magazine tray

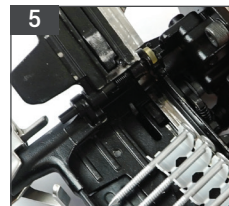

Pull nails to feeding area

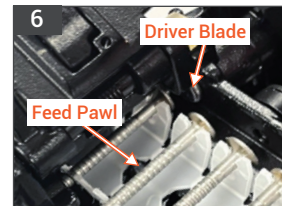

Ensure first nail head aligns to driver blade, and plastic collation is aligned with the feed pawl.

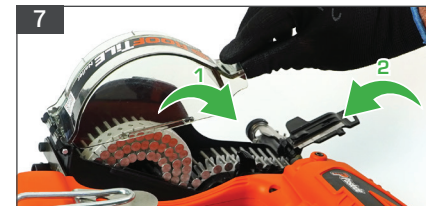

Close magazine



Click to lock

BATTERY

LAST THING IN - FIRST THING OUT




Charge Battery



Insert Battery - Standby



Insert Battery - Ready

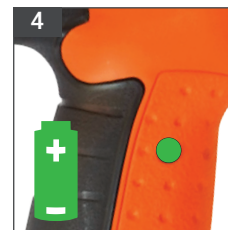

Check green light flashing




If red light flashing charge battery

Remove battery into 1st click "Off" position if not using the tool for long periods.

Remove battery completely when storing or transporting tool.



TOOL

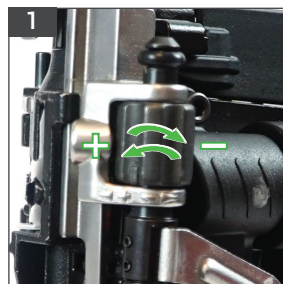

Adjust depth of drive to ensure nails are embedded at correct depth.

- ⊕ Increases nail insertion depth (nail drives deeper)
- ⊖ Decreases nail insertion depth (nail stands higher)



Guide the hole locating probe upward into the pre-punched hole.



Locate top edge of pre punched hole – hole locating probe to touch top of the hole to avoid nail firing direct into tile.




Lightly press down to actuate the engine.

Caution: too much weight pressure could break tiles.




Nose will retract, pull trigger to fire.

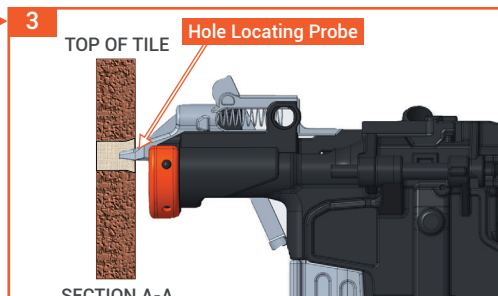


SECTION A-A

TOP OF TILE

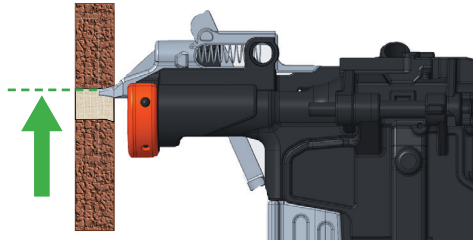


SECTION A-A

Refer to www.paslode.co.uk for further information on your tool and FAQ's.

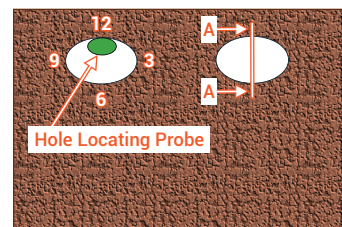

Hole Locating Probe

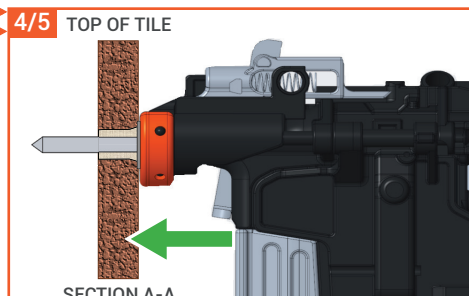

4/5 TOP OF TILE

SECTION A-A




REMEMBER TO REGISTER YOUR TOOL FOR WARRANTY BENEFITS - www.paslode.co.uk




We offer a premium 3-year warranty on all Paslode Xi tools and Coil Nailers, covering all components, provided the Manufacturer's Operating Instructions have been followed, no modifications have been made, only original components or spare parts have been used, and the tool has not been accidentally damaged or neglected. Except for the IM350+, which carries a 2-year warranty.




REMOVING PLASTIC COIL

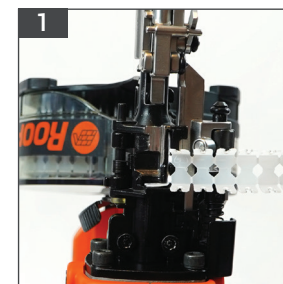


Ensure there is enough plastic collation to hold firmly with your whole hand.
(after 20 shots approx.)

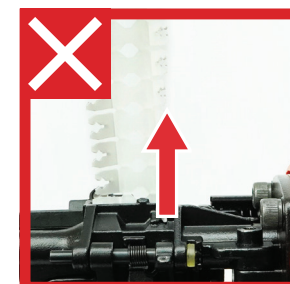


Important: Plastic collation must not be pulled up.

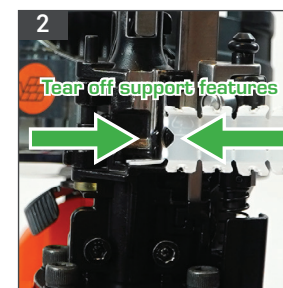

Tear off support features

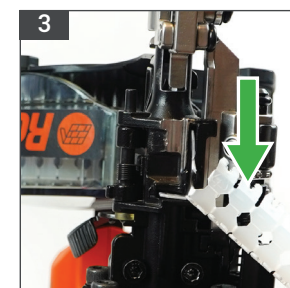

Tear plastic from the sides, using the support features.

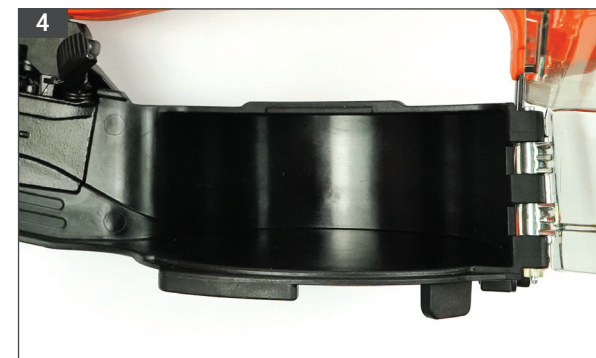

Use the full coil to reduce the risk of nails becoming misaligned when removing it from the magazine.